


# DIAGONAL WALL CABINET

CODE	ITEM	QTY
A	Right   Left Side Panel	2
B	Right   Left Side Panel	2
D	Bottom Panel	1
G	Shelf	2/3
H	Back Panel	1
M	Front Face	1

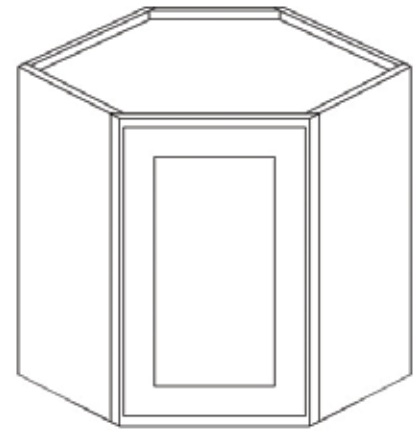

## EASY ASSEMBLY METAL CLIP SYSTEM



- Align Clips ① and ②
- Slide ① into ②
- Insert locking screw into clip pair
- Tighten all screws

**STEP 1**

- Lay M on a soft working surface with grooves facing upward
- Insert D into the grooves on the Front Face M making sure clips are lined up and fully engaged
- Repeat and insert the other D

**STEP 2**

- Lay B with grooves facing upward
- Insert A into the grooves of B making sure clips are lined up and fully engaged
- Repeat these steps for the other Side Panel A

**STEP 3**

- Insert A so that the grooves and assembly clips line up with D and is inserted into M
- Repeat these steps for the other A

**STEP 4**

- Insert the Back Panel H against Right/Left Back Panels B as shown
- From the back of the cabinet, screw Side Panels B into the Back Panel H, using the long included screws

**STEP 5**

- Insert shelf clips into A and B, slide G and secure